

blueMatic EAV

Wiring Options




Winkhaus UK Ltd


2950 Kettering Parkway, Kettering,
Northants NN15 6XZ
Tel: +44 (0)1536 316000
Fax: +44 (0)1536 416516

www.winkhaus.co.uk
email: enquiries@winkhaus.co.uk

EAV Entrance Door Lock Wiring diagram for Access Control

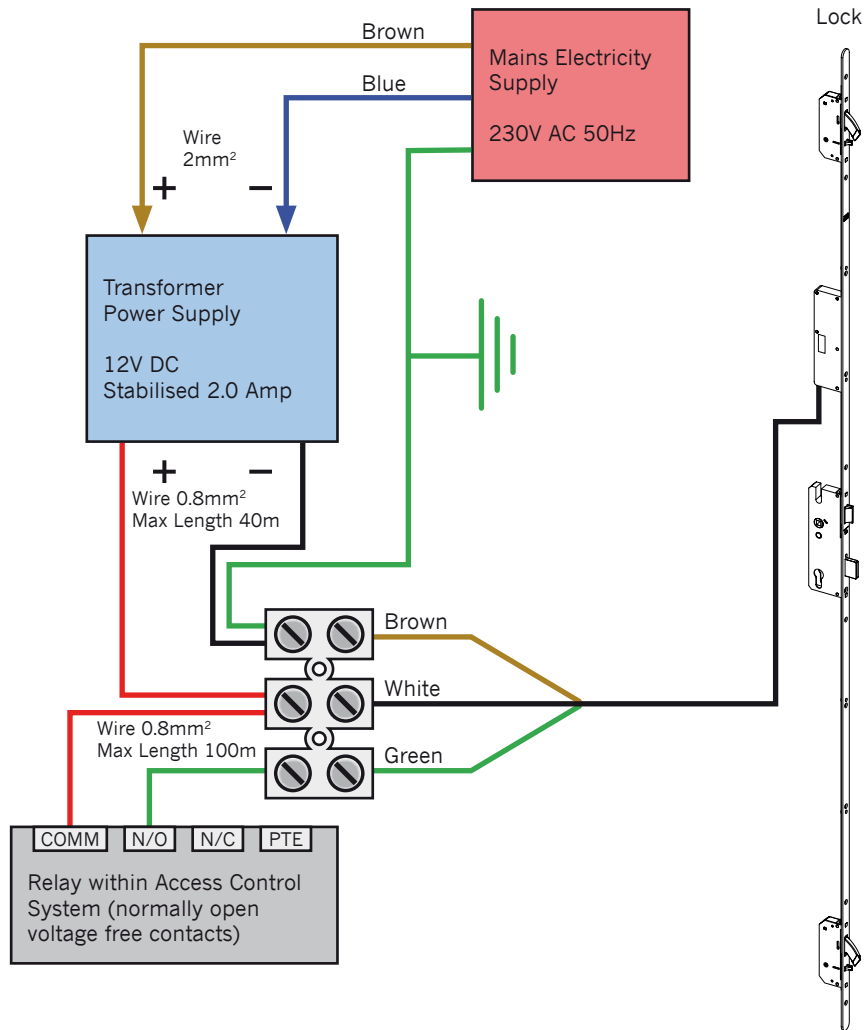

EAV Entrance Door Lock Wiring diagram for Push Switch

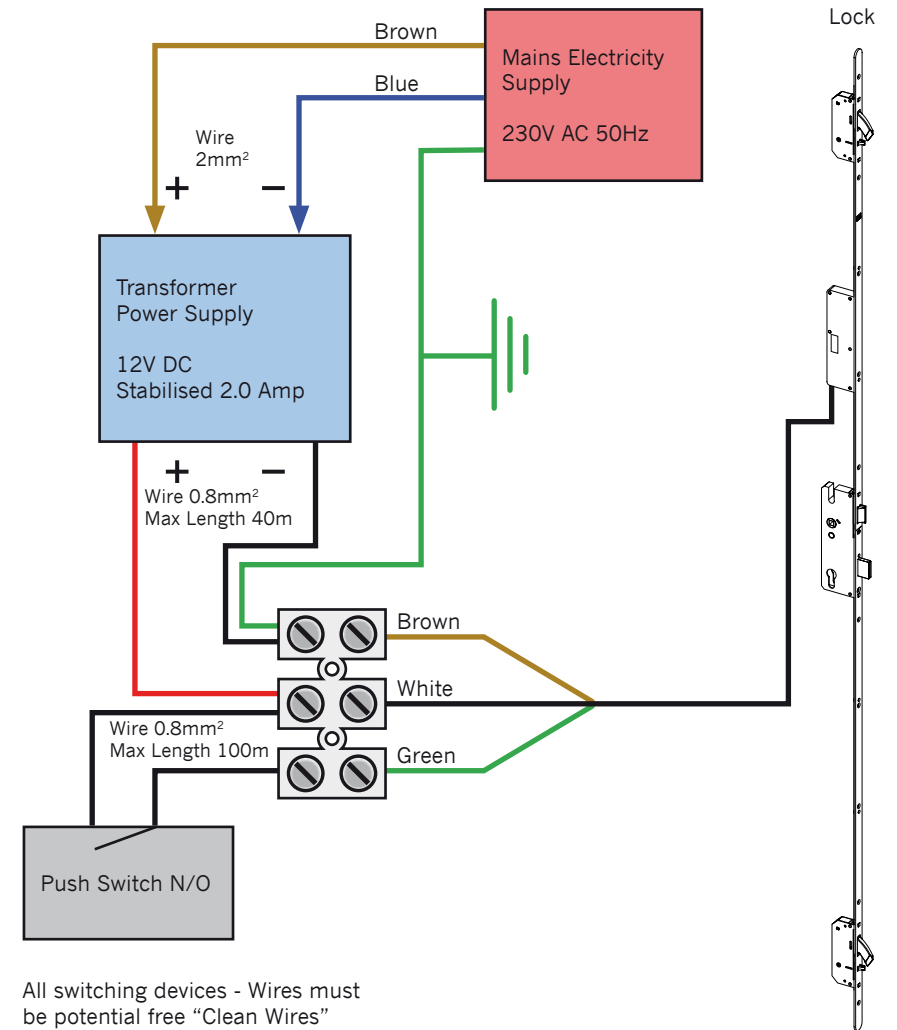

All switching devices - Wires must be potential free "Clean Wires"