




DFNKNDK Doctors Kocker - Concealed Fix Fitting Instructions

Door Preparation

- 1 Use the Doctors Kocker fitting template (please see page 2 or the box packaging).

Mark holes on the door - please use the holes indicated as **Concealed Fix**.

The distance between fixing plate should measure 145mm (from each centre).
- 2 Once the holes are marked, use a $\varnothing 3 - 3.5\text{mm}$ drill bit and drill a 15-20mm deep hole.

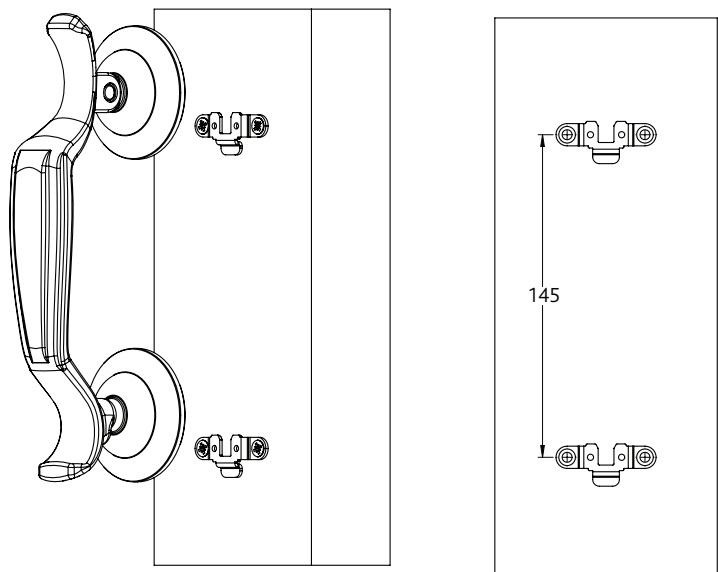

Knocker Assembly and Installation

- 3 Position one of the fixing plates over the bottom pre-drilled holes and then secure with 2 x screws (do not fully tighten at this stage).
- 4 Using a spirit level, ensure the fixing plate is correctly position (level) and then fully tighten both screws.
- 5 Repeat the above for the second fixing plate in the top hole position.
- 6 Positioned the bottom knocker plate onto the fixing plate at the bottom and pull down gently, when you hear a click the plate is securely fastened.
- 7 Then position the knocker over the top fixing bracket and using the pivot point pull down gently, when you hear a click the plate is securely fastened.

